


# A.C. Compressor Mount 100L

Small Block Chevy - Short Water Pump  
Driver's Side

## Note:

Install bolts into the water pump first.  
Then determine the number of spacer  
washers needed between the bracket  
and intake manifold. This will vary with  
the thickness of the various brands of  
manifolds. **START ALL MOUNTING BOLTS  
BEFORE TIGHTENING.**

We use a belt length of 54 to 55" with this  
mount on installations in our shop.  
However; this can vary with the diameter  
of your pulleys.

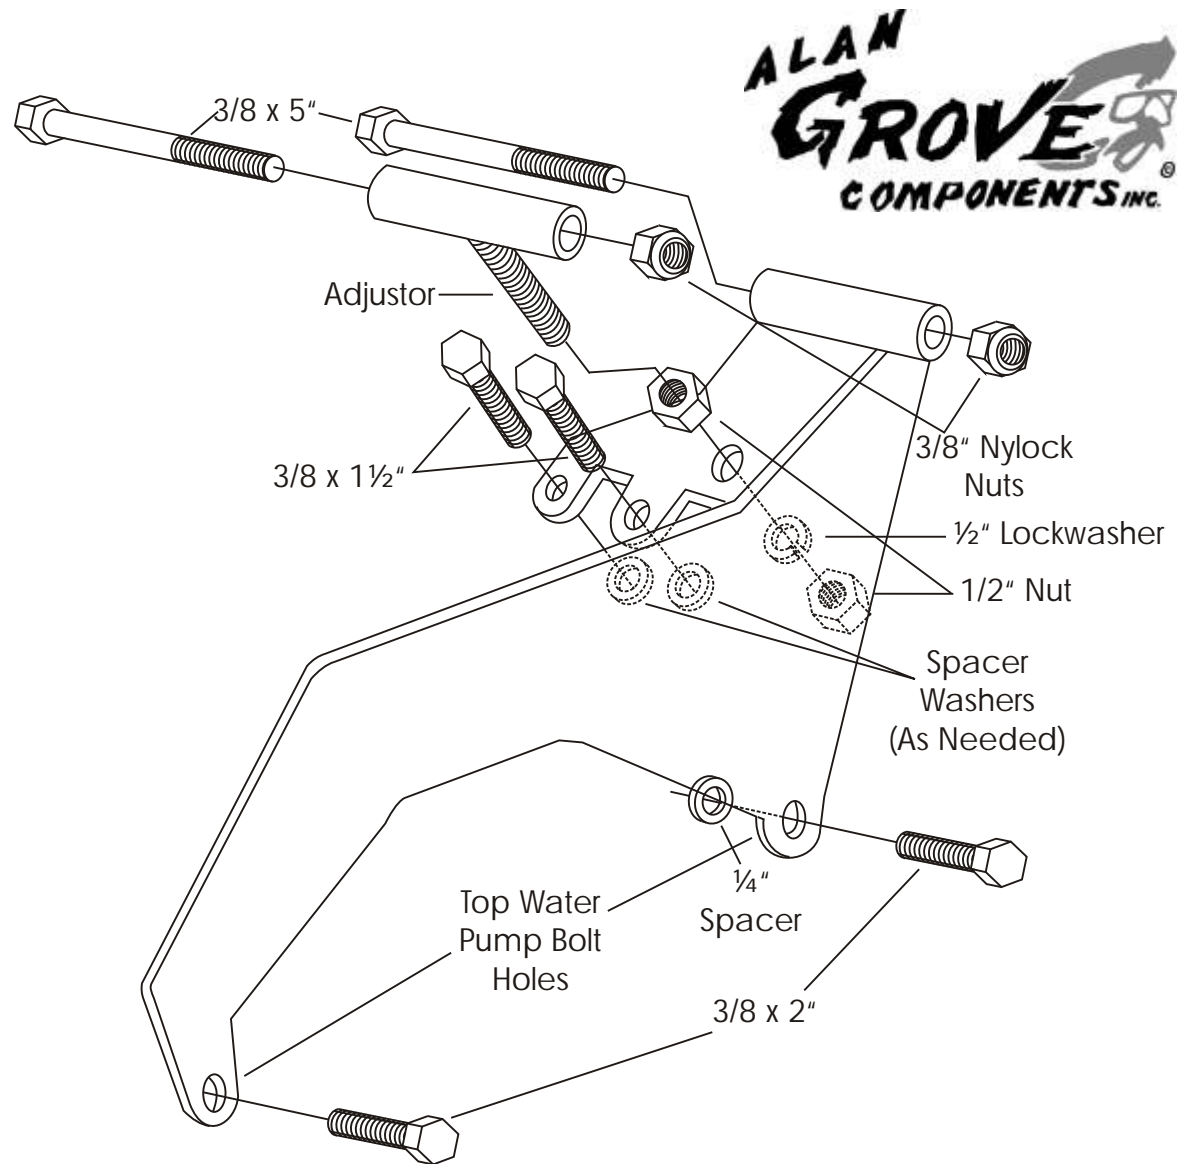

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

A.C.  
Compressor  
Mount  
100L  
Small Block Chevy - Short Water Pump  
Driver's Side

ALAN GROVE COMPONENTS, INC.  
27070 METCALF ROAD  
LOUISBURG, KS 66053