


A.C. COMPRESSOR MOUNT 137L

Small Block Chevy - Long Water Pump
1969 and Later Cast Iron Heads
Driver's Side

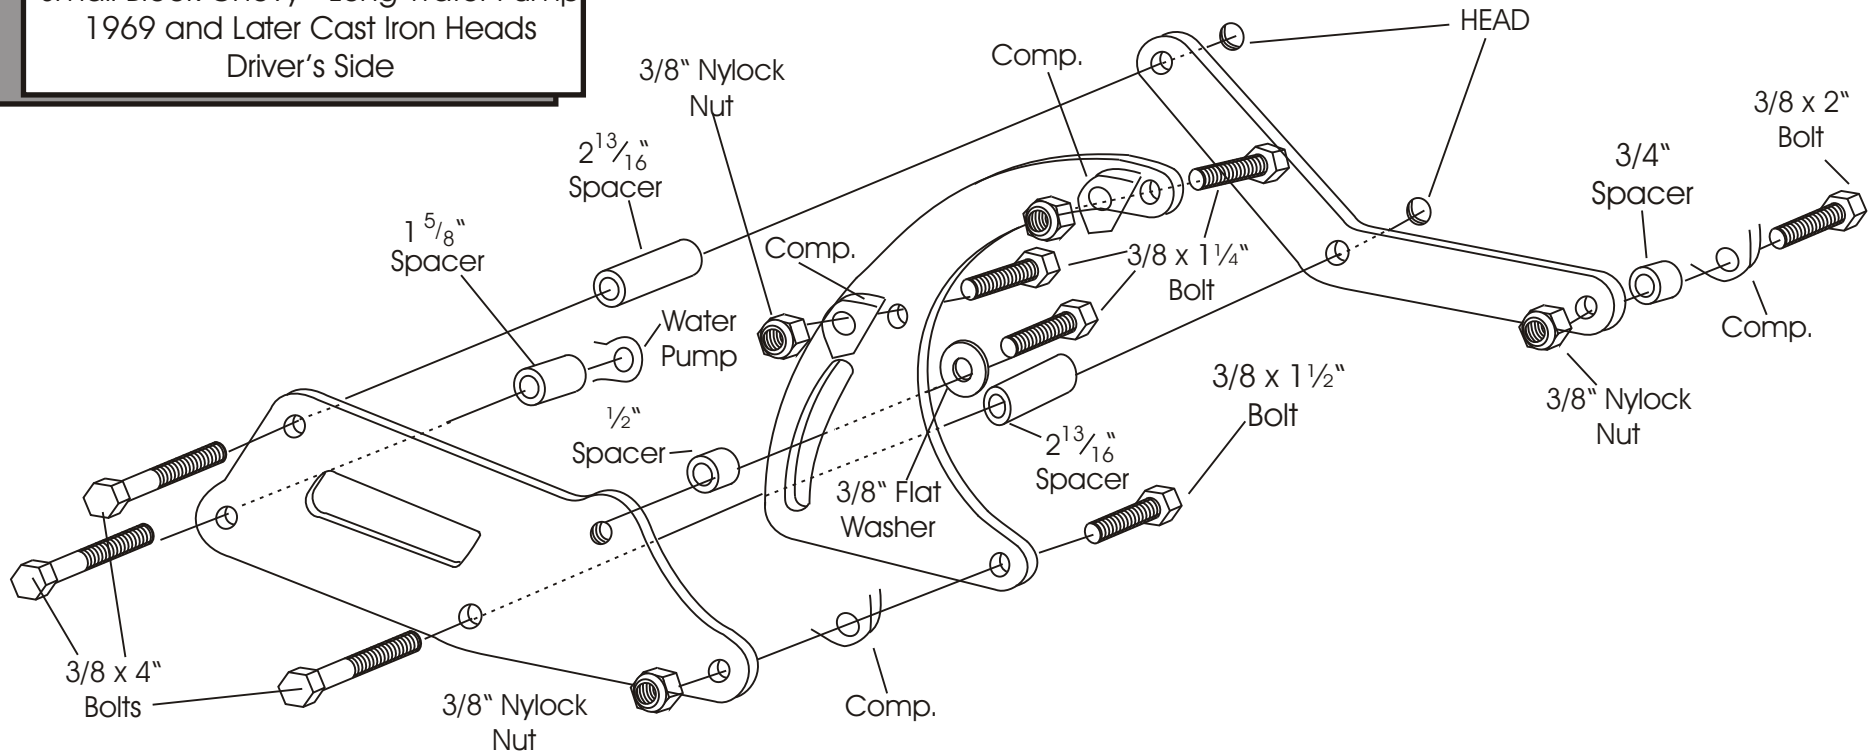

As with any mount system, assemble all of the brackets to engine BEFORE TIGHTENING THE BOLTS.

We use a belt length of $59\frac{1}{2}$ - $60\frac{1}{2}$ " with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

A.C.
COMPRESSOR
MOUNT
137L

Small Block Chevy - Long Water Pump
1969 and Later Cast Iron Heads
Driver's Side

ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053