

# ALTERNATOR MOUNT 201R

Small Block Chevy - Passenger Side  
Long Water Pump




**NOTE:**

Install bolt into the water pump first. Then determine the number of spacer washers needed between the bracket and the intake manifold. This will vary with the thickness of the various brands of manifolds. **START ALL BOLTS BEFORE TIGHTENING.**

(We use a belt length of 52 to 53" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.)

This mount is designed to be used with any 1972 and newer long water pump.

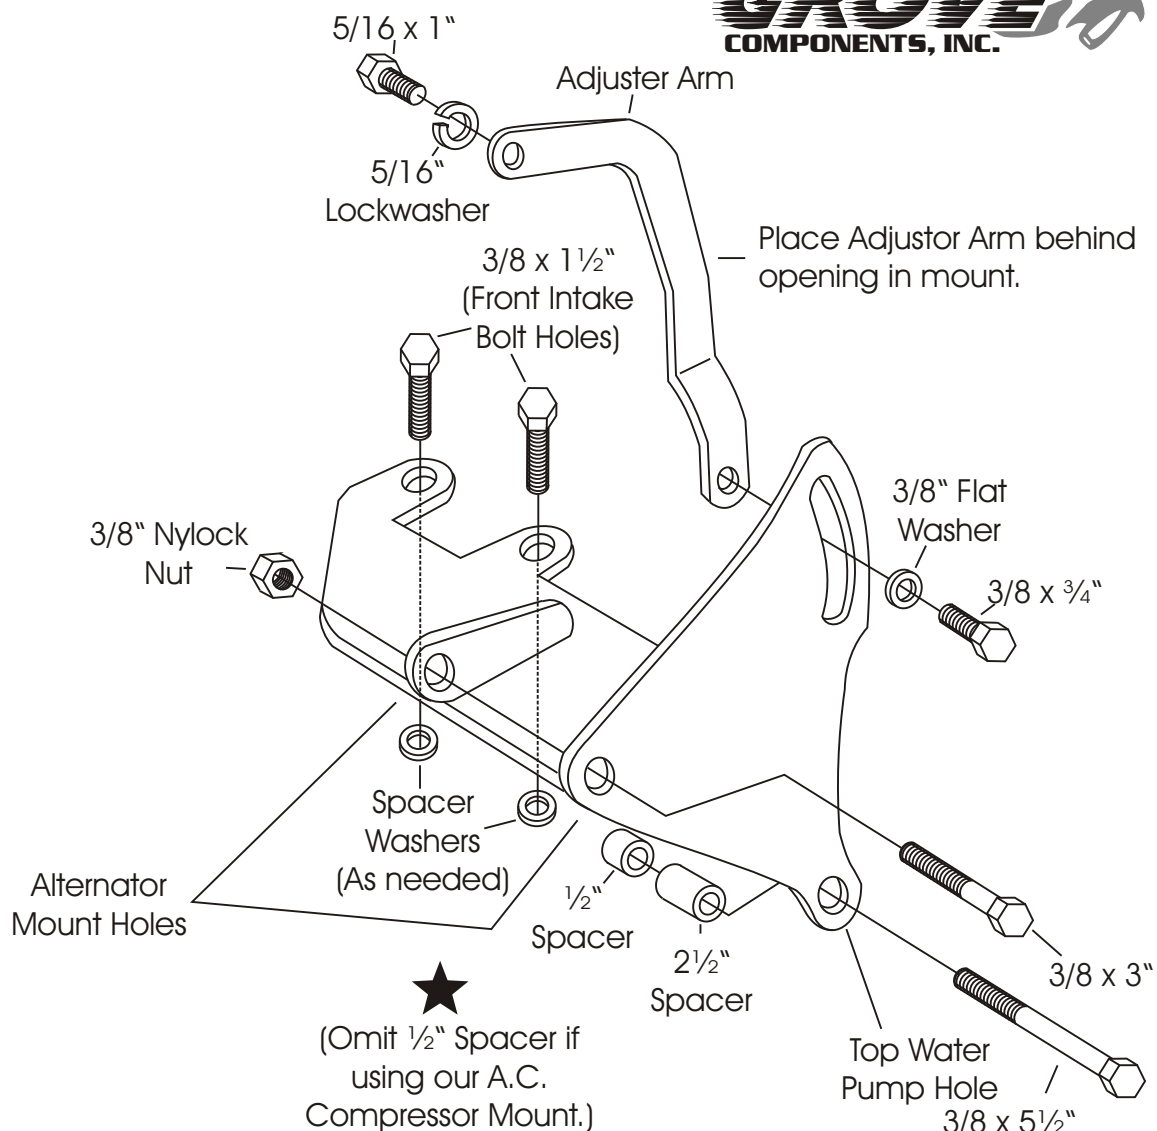

**As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.**

ALTERNATOR  
MOUNT  
201R

Small Block Chevy - Passenger Side  
Long Water Pump

**ALAN GROVE COMPONENTS, INC.**  
**27070 METCALF ROAD**  
**LOUISBURG, KS 66053**