




Extra Clearance ALTERNATOR MOUNT 203L

Small Block Chevy - Long Water Pump
Driver's Side

NOTE:

Install bolt into the water pump first. Then determine the number of spacer washers needed between the bracket and the intake manifold. This will vary with the thickness of the various brands of manifolds. **START ALL BOLTS BEFORE TIGHTENING.**

The alternator belt will run in the second groove from the front of the crank and water pump pulleys originally used for the factory compressor. It was designed to be used with our 103R Passenger Side Compressor Mount.

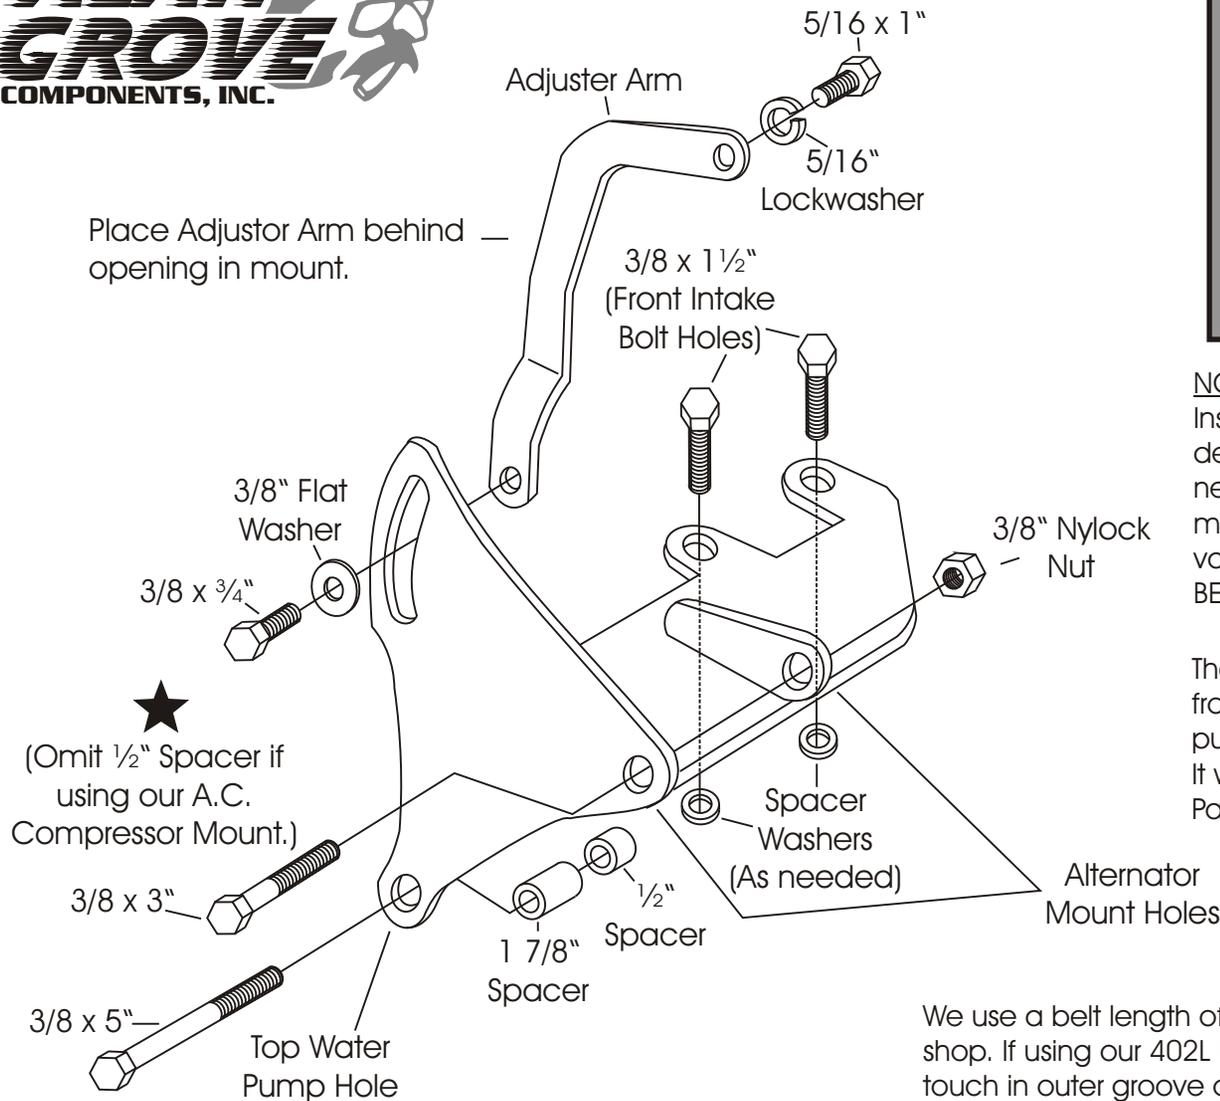

Place Adjuster Arm behind opening in mount.

★
(Omit 1/2" Spacer if using our A.C. Compressor Mount.)

We use a belt length of 52 to 53" with this mount on installations in our shop. If using our 402L Power Steering Pump mount, Alternator belt will touch in outer groove of a two groove power steering pump pulley. Belt length for this application will be around 56 to 57". However; this can vary with the diameter of your pulleys.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

Extra Clearance
**ALTERNATOR
MOUNT
203L**

Small Block Chevy - Long Water Pump
Driver's Side

ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053