


ALTERNATOR MOUNT 222L

**Big Block Chevy - Long Water Pump
Driver's Side - Wide Mount**

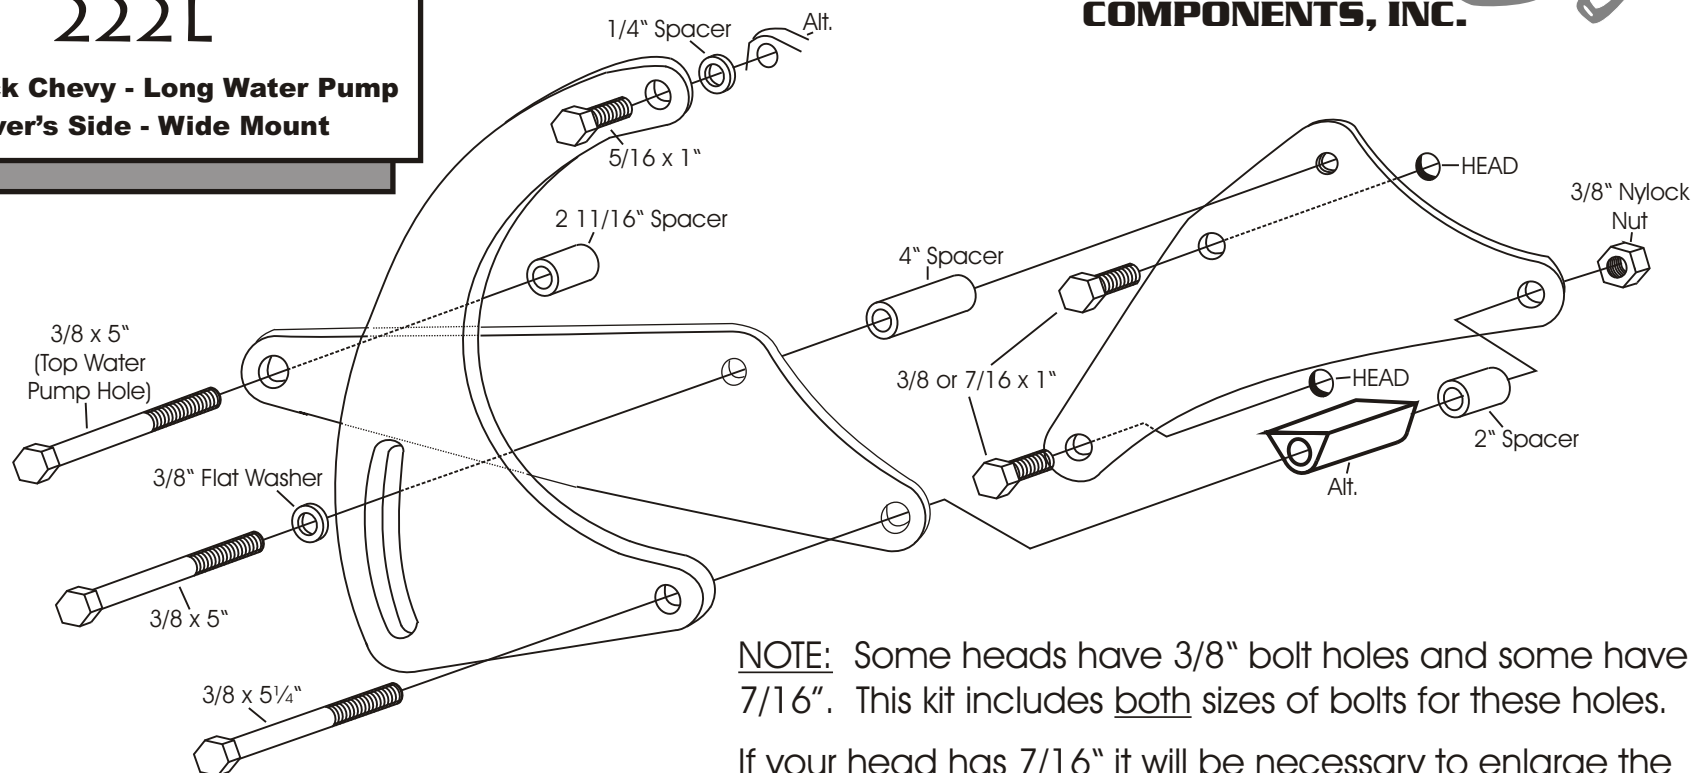

NOTE: Some heads have 3/8" bolt holes and some have 7/16". This kit includes both sizes of bolts for these holes.

If your head has 7/16" it will be necessary to enlarge the corresponding holes in the mount to 7/16".

When installing the mount, start all bolts and mount the alternator before tightening.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

The Alternator Belt will run in the second grooves from the front of the crank and water pump pulleys originally used for the factory compressor. It is designed to be used with our 122R Passenger Side Compressor Bracket.

(We use a belt length of 58-59" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.)

**ALTERNATOR
MOUNT**

222L

**Big Block Chevy - Long Water Pump
Driver's Side - Wide Mount**

**ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053**